



PRECISE

MACHINE WORKS

Ground Rod Driver Adapter

Using The Rhino Driver

Insert or remove Ground Rod with only one person and eliminate the need for a ladder or bucket truck.

Eliminate the need for a post driver that could result in an injury. The Ground Rod Driver also enables temporary grounding of line trucks more securely than screw down drive rods. The Rhino Driver works well in any environment, including dry or frozen-soil conditions.



Ground Rod Driver Adapter

Conveniently clamp on rod before driving rod into ground.




Part # 16.0600.00

Rhino Adaptor Pin

Place Adapter Pin on clamp and begin to drive rod. Re-position Adapter Pin on top of rod and continue to pound rod into the ground.



Part # 16.0700.00

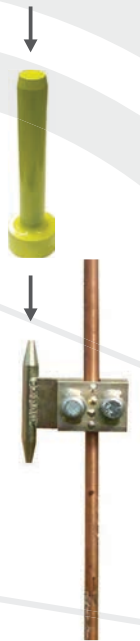

No More Need to Use a Post Driver That Can Result In Injury